




# Kodak EasyShare LS743 Camera Case Disassembly

Replace outer casing.

Written By: Michael

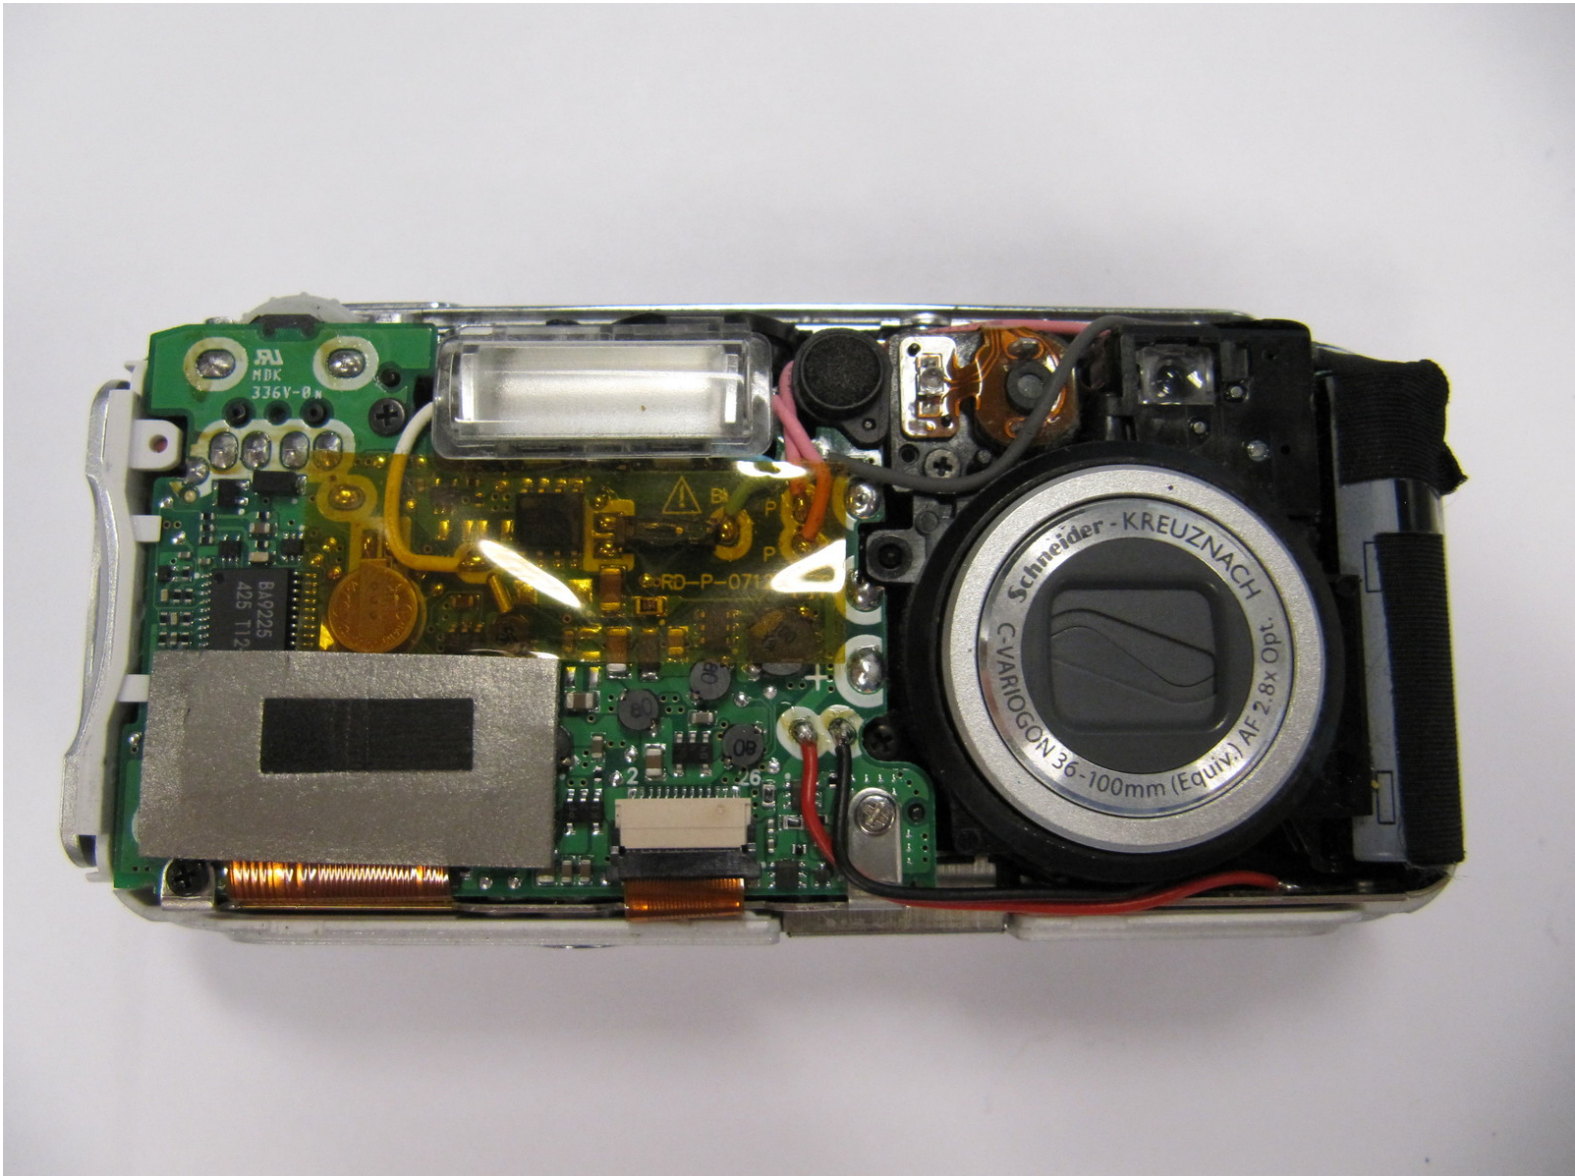

## INTRODUCTION

Remove damaged case and replace with new casing.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-


## Step 1 — Kodak EasyShare LS743 Camera Case Disassembly



- Remove 7 screws.

- 1 (6.25 mm) screw located on the top right corner, next to the view screen.
- 4 (4.45mm) screws on the bottom of the camera.
- 2 (2.95mm) screws on the left side of the camera.


## Step 2

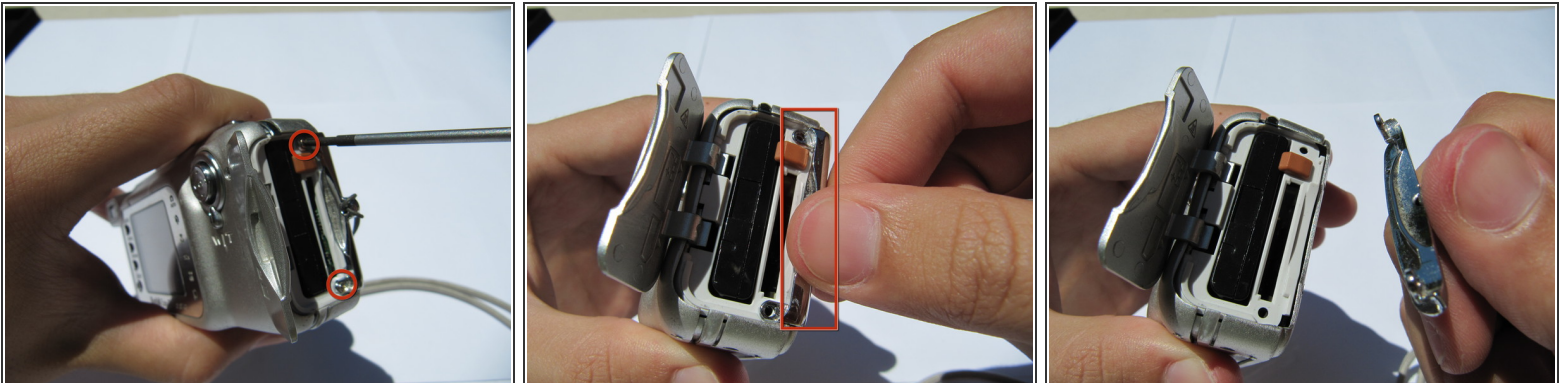

- There will be 2 (5.39mm) screws. Remove the screws in order to remove the lanyard.



## Step 3

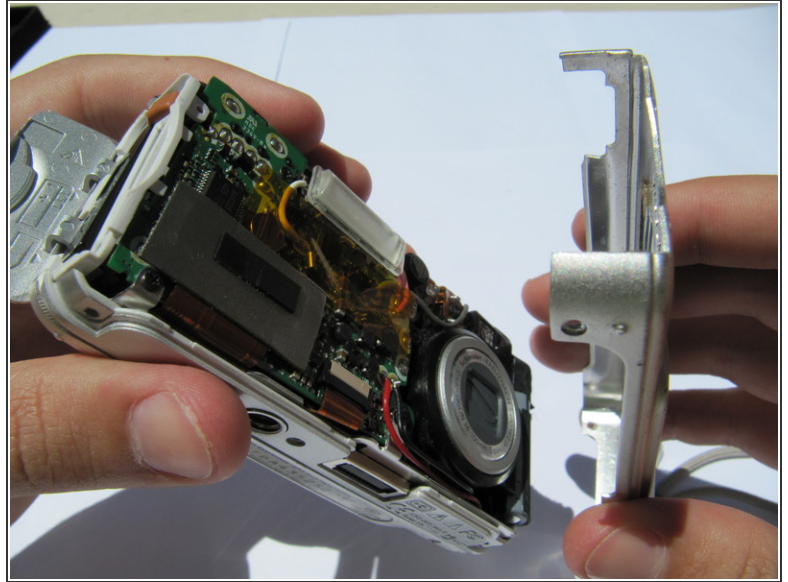

- Remove the rear camera casing.
- Remove the front casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 06:25:39 AM.